August International Ltd
United Kingdom
Telephone:0870 850 3525
www.augustint.com

August®

User Manual

11 Inch Digital & Analogue LCD TV

With built-in DVD player, card reader and USB port

DA110CD

User Manual

Thank you for buying our August TV. You may already be familiar with using a similar product but please take time to read these instructions carefully. It is designed to familiarise you with the product's many features and to ensure that you get the very best from your purchase.

Safety

To ensure your safety and the safety of others, please ensure you read the Safety Instructions **before** you use this product.

Disposal

Please ensure the product and its accessories are disposed in compliance with WEEE (Waste Electrical and Electronic Equipment) Directive and other regulations. Please check with your local authority for disposal regulations.

Customer Service:

If you need help, please contact our Customer Service:
Telephone: +44 (0) 870 850 3525
Email: service@augustint.com

Quick Start Guide

DA110CD

1. It is suggested that you use a roof top aerial when scanning for TV channels for the first time, if any signal is detected, the channel information will be saved on the TV, you may then switch back to the portable antenna supplied and change your location to find the best place to receive the signal.

2. When turning on the device for the first time, to search for Digital Freeview TV, press DVD/DVB to switch to DVB (Freeview TV) mode, it will ask you to do the "First Time Installation". Follow the instructions to select "Country" and start the "Auto Scan". Once the scan has finished, press CH+, CH- or EPG to select channels.

3. To search for Analogue TV, press TV on the remote and you should see either "AUTO", "PAL" or "SECAM" at the top right corner of the screen. Press MENU once to enter the first menu to change "Bright", "Contrast", "Colour" and "Language". Press MENU again to enter the second menu to search for channels, change the video system (S-COLOR) between AUTO, PAL and SECAM, and change the sound system (S-SYS) between I (UK), L (France), BG (other European countries) and DK (Russia and Asia countries). Press DOWN on the second menu to select "AUTO-SEARCH", then press RIGHT to start searching for channels.

4. If you have done the first time installation before, and would like to search for Digital Freeview channels again, or if you have moved to a different region and need to scan channels again, press DVD/DVB to switch to DVB (Freeview TV) mode, then press SETUP, press DOWN to select "Installation", press RIGHT to select "Auto Scan", press ENTER, press LEFT or RIGHT to select the correct "Country", press DOWN to select "Start Scan", then press ENTER to start. Once the scan has finished, press CH+, CH- or EPG to select channels.

5. To play a DVD or CD, insert the disc into the DVD drive, press DVD/DVB to switch to DVD mode, press PLAY or wait for the player to load the disc automatically.

6. To play music, photos or video files on a SD card or memory stick, insert the SD card or memory stick to the card slot or USB port, press DVD/DVB to switch to DVD mode, press LEFT or RIGHT to switch between the “Audio”, “Photo”, “Video” folders and Subtrack, press UP or DOWN to select the file you want to play, press ENTER or PLAY to start playing.

7. If your TV model has a built-in battery, there are power sockets on both sides of the TV, the side with “CHG” is only for charging the battery. When connected with a power adapter, the red light “CHG” will be on, which means that it is charging. The power socket on the other side of the TV is for watching TV only.

8. Please note the included portable antenna may only be used in areas where signal is very strong. There may be difficulties in receiving signal with the portable antenna in some regions at present, this is due to the fact that Freeview (www.freeview.co.uk) is yet to operate in full power in the UK. The government aims to achieve a full switchover by 2012, which will occur in stages, region by region between 2008 and 2012, at present the quality of Freeview reception varies in different regions across the UK.

   As mentioned on the Freeview website, only 73% of the UK population is able to receive Freeview at present and only a small number of households might be able to use a set top aerial at present. This only applies if you live in an area with coverage close to a transmitter, but reception would still be unreliable and they strongly recommend that you use a roof top aerial for good reception.

   The reception will be improving along with the progress of the Digital Switchover Program. Reception may also be affected by various factors such as how close you are to transmitters, tall buildings, thick walls, ceilings and weather etc.

9. For any further queries, please telephone August International Ltd helpline 0870 850 3525 or email service@augustint.com

Contents

1.Safety Instructions **1**

2.Product Features **3**

3.Accessories **4**

4.Part Names and Functions **5**

5.Remote Control **7**

6.Connections **9**

6.1.Installing the base support **9**

6.2.Connecting the power supply **9**

6.3.Connecting the earphones **9**

6.4.Connection of AV input **9**

6.5.Connection of AV output **9**

6.6.System connection **10**

7.DVD Player Operation **11**

7.1.Basic operations **12**

7.2.DVD Setup Menu **13**

7.3.Playing MP3 music **17**

7.4.Playing JEPG photos **17**

7.5.Playing MPEG4 video **18**

7.6.USB port function **18**

7.7.Card reader function **18**

8.Digital Freeview TV (DVB-T) **18**

8.1.Turn on the machine **18**

8.2.First time installation **18**

8.3.Main menu **19**

9.Analogue TV **22**

10.AV Input **23**

11.Troubleshooting **23**

12.Technical Parameters **24**

13.Battery Charging **26**

14.Warranty **27**

1.Safety Instructions

Storage and Use

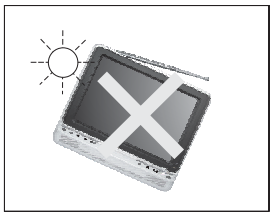

Keep this machine away from hot or cold places. The storage temperature of this machine is -20~60℃, the application temperature of this machine is 5~35℃.

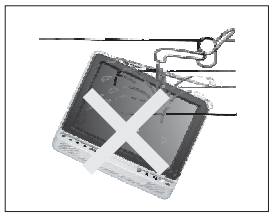

Keep the TV set away from water or damp environment.

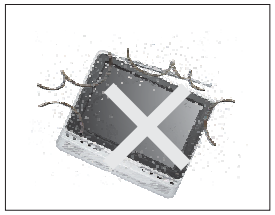

Never expose the TV set to moisture, dust, oil or smoke.

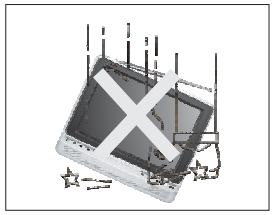

Avoid dropping or exposing to impacts

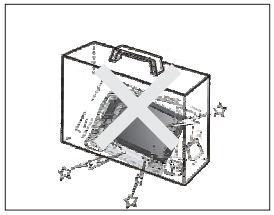

Never put this machine in containers that are unstable as this may cause damage.

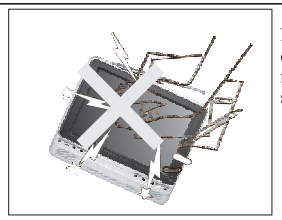

Never extrude or chafe this machine with sharp objects.

⚠ Warning

To prevent electric shock, do not expose the unit to rain or moisture. Never attempt to open the cabinet, high voltages are present in the unit.

⚠ Caution

1.Please place the unit in a place with a good airflow.
2.It is normal for the cover and rear panel to become warm after the player has been operating for an extended period of time.
3.Do not move this device during playback. Doing so may cause damage to the unit and the disc.
4.The DVD Video player is a CLASS 1 LASER product. There may be dangerous laser radiation inside. As the laser beam used in this DVD Video player is harmful to the eyes, do not attempt to disassemble the cabinet.

Maintenance

Please unplug all connection wires before start cleaning this machine.

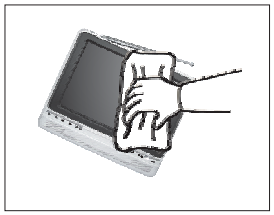

Please wipe the display screen and buttons with a soft cloth. Only clean the screen with professional LCD TV screen cleanser.

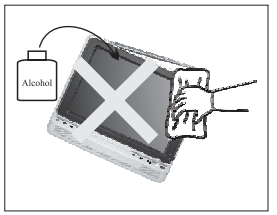

Never wipe this machine with abrasive cloth, detergent powder, alcohol and benzene etc. various propellants or chemical cleaning products.

Operation Precautions

1.Only the attached AC adapter and the car adapter are suitable.
2.For the sake of safety, when you do not intend to use the display, please switch off the AC adapter or car adapter.

Earphone Operation Precautions

1.Please do not tune your headphone / earphone at high volumes, otherwise, it may lead to ear damage.
2.For open-designed earphone, to avoid annoying those close by, please tune down the volume.
3.In case of any tinnitus, please turn down the volume or stop using this machine.
4.It is recommended by aurists that the earphones should not be used continuously for a prolonged period.

⚠ Warning

For the sake of safety for yourself and others, please do not watch the TV while driving.

⚠ Special Notice

A few highlights or dark spots may appear on the LCD screen. It is a very common phenomenon of active matrix display technology, and does not mean any defects or faults. Never try to repair this machine by yourself. In case of any fault or failure, please turn off the display at once, and notify our Company or the corresponding dealer. The display is made up of many precision electronic components. Any disassembly or modification may lead to further damage.

2. Product Features

1. 11” Digital and Analogue LCD TV with slot-in DVD player.
2. Plays DVD, VCD, SVCD, MPEG4, JPEG, MP3, CD-R, CD-RW, WMA.
3. SD/MMC/MS card reader and USB port.
4. Auto Program Search, Electronic Program Guide.
5. Subtitle, Multi-language, Stereo sound.
6. Composite Video / Stereo Audio input / output.
7. 10-bit Video D/A Converter, high-definition multi-media interface of up to 500 lines.
8. 24-bit/192 KHz Audio D/A Converter, high quality, professional Hi-Fi standard.

24-bit/192KHz D/A Converter

This is the latest converting technology which can apply for 192KHz sampling rate and 24-bit data soft. The dynamic range of 48 decibel is better than the traditional 16-bit CD code.

Laser Lens Power Protection System

The laser lens is the most important part of the DVD Player which affects the unit life and error correction. When reading scratched or non-standard discs, the laser strength will be up to 24 times as powerful. This dramatically decreased the life of the laser lens. The laser lens protection system of this unit ensures the stability of the laser power and increases the life of the laser lens.

3. Accessories

AC/DC adapter

Car adapter

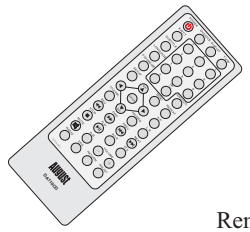
Remote control

Digital TV antenna

AV in/out cord


Telescopic antenna

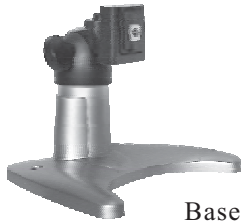
Base support

Double-sided adhesive pad for base support

4. Part Names and Functions

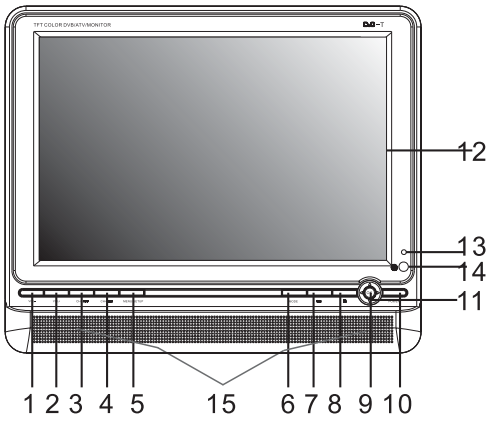

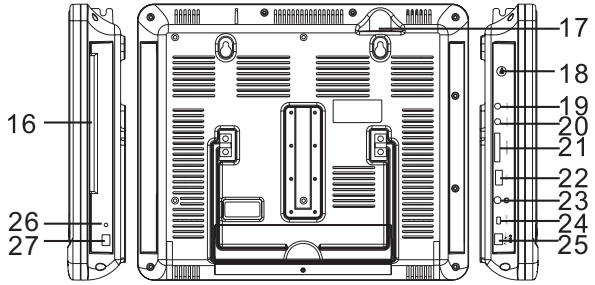

（With battery）

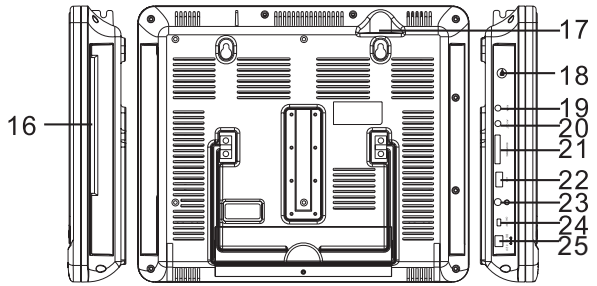

（Without battery）

1.VOL-
2.VOL+
3.PREV
4.NEXT
5.MENU/SETUP
6.MODE
7.PLAY/PAUSE
8.STOP
9.OK confirm
10. Power On / Standby switch
11.UP/DOWN/LEFT /RIGHT
12.TFT-LCD screen
13.Power indicator
Standby:Red
Turn on:Green
14.Remote receiver
15.Stereo speakers
16.Slot-in DVD loader
17.Antenna input jack
18.EJECT
19.AV IN
20.AV OUT
21.SD/MS/MMC port
22.USB port
23.Earphone jack
24.Power ON/OFF switch
25. +12V DC Power In jack
26.Charge indicator
27. +13.8V DC Power In jack (for battery charging)

⚠ Notice

This player can not play disc, card and USB stick at the same time.

Panel Button Functions

This table explains the functions of the buttons on the panel in each mode:

	Panel Button	Press	Press & Hold	DVD	DVB-T	ATV	AV
1	VOL-	VOL-		VOL-	VOL-	VOL-	VOL-
2	VOL+	VOL+		VOL+	VOL+	VOL+	VOL+
3	PREV	PREV		PREV	PREV		
4	NEXT	NEXT		NEXT	NEXT		
5	MENU/SETUP	SETUP		SETUP	SETUP	MENU	MENU
6	Mode	Mode	DVD/DVB	DVB/Mode	DVD/Mode	Mode	Mode
7	PLAY/PAUSE	PLAY/PAUSE		PLAY/PAUSE			
8	STOP	STOP		STOP			
9	OK	OK		OK	OK		
10	POWER	POWER		POWER	POWER	POWER	POWER
11	UP	UP		UP	UP	UP	UP
11	DOWN	DOWN		DOWN	DOWN	DOWN	DOWN
11	LEFT	LEFT		LEFT	LEFT	LEFT	LEFT
11	RIGHT	RIGHT		RIGHT	RIGHT	RIGHT	RIGHT

⚠ Notice

1.In DVD mode, press and hold MODE on the panel to switch to DVB-T mode.
2.In DVB-T mode, press and hold MODE on the panel to switch to DVD mode.

5. Remote Control

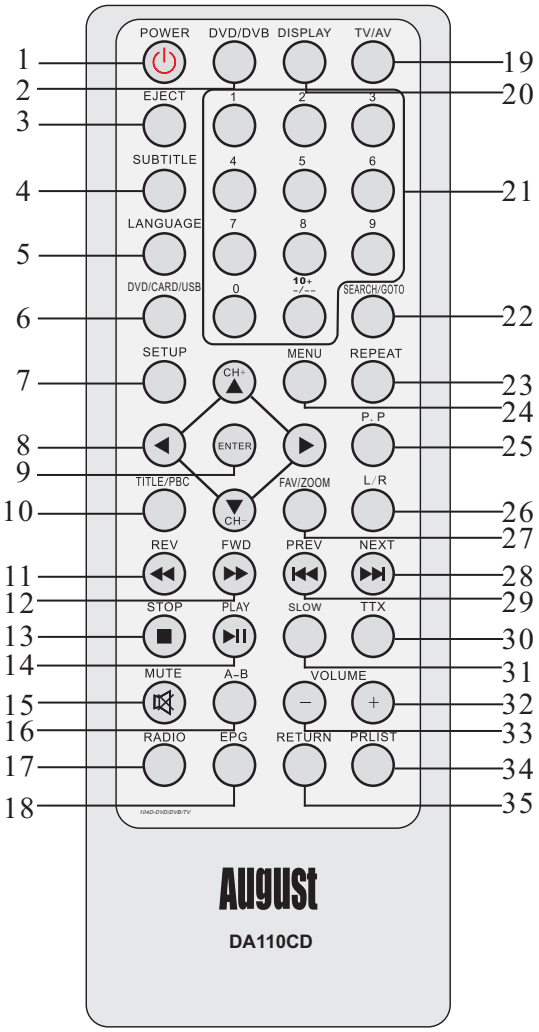

1.POWER
2.DVD/DVB-T Shift
3.EJECT
4.SUBTITLE
5.LANGUAGE
6.DVD/CARD/USB
7.SETUP
8.UP/DOWN/LEFT/RIGHT
9.ENTER
10.TITLE/PBC
11.REV
12.FWD
13.STOP
14.PALY/PAUSE
15.MUTE
16.A-B
17.RADIO
18.EPG
19.TV/AV
20.DISPLAY
21.NUMBER
22.SEARCH/GOTO
23.REPEAT
24.MENU
25.P. P
26.L/R
27.FAV/ZOOM
28.NEXT
29.PREV
30.TTX（not available）
31.SLOW
32.VOLUME+
33.VOLUME-
34.PRLIST
35.RETURN

Remote Control Functions

This table explains the functions of the buttons on the remote control in each mode:

	Remote Button	DVD	DVB-T	ATV	AV
1	POWER	ON/OFF STANDY	ON/OFF STANDY	ON/OFF STANDY	ON/OFF STANDY
2	DVD/DVB-T	DVD/DVB-T	DVD/DVB-T	DVD	DVD
3	EJECT	EJECT			
4	SUBTITLE	SUBTITLE	SUBTITLE		
5	LANGUAGE	LANGUAGE	LANGUAGE		
6	DVD/CARD/USB	DVD/CARD/USB			
7	SETUP	SETUP	SETUP		
8	▲ /CH+	▲	▲ /CH+	▲ /CH+	▲
8	▼ /CH−	▼	▼ /CH−	▼ /CH−	▼
8	◀	◀	◀	◀	◀
8	▶	▶	▶	▶	▶
9	ENTER	ENTER	ENTER		
10	TITLE/PBC	TITLE/PBC			
11	◀◀	◀◀			
12	▶▶	▶▶			
13	■ (STOP)	■ (STOP)			
14	▶II (PLAY/PAUSE)	▶II (PLAY/PAUSE)			
15	MUTE	MUTE	MUTE	MUTE	MUTE
16	A-B	A-B			
17	RADIO		RADIO		
18	EPG		EPG		
19	TV/AV	TV/AV	TV/AV	TV/AV	TV/AV
20	DISPLAY	DISPLAY	DISPLAY	DISPLAY	DISPLAY
21	0~9	0~9	0~9	0~9	
21	10+/-/--	10+		-/--	
22	SEARCH/GOTO	GOTO	SEARCH	SEARCH	
23	REPEAT	REPEAT		REPEAT	
24	MENU	MENU	MENU	MENU	MENU
25	P. P	P. P	P. P	P. P	P. P
26	L/R	L/R	L/R		
27	FAV/ZOOM	ZOOM	FAV		
28	▶▶I	▶▶I	▶▶I		
29	I◀◀	I◀◀	I◀◀		
30	TTX				
31	SLOW	SLOW			
32	VOLUME+	VOLUME+	VOLUME+	VOLUME+	VOLUME+
33	VOLUME−	VOLUME−	VOLUME−	VOLUME−	VOLUME−
34	PRLIST		PRLIST		
35	RETURN		RETURN		

6. Connections

6.1. Installing the base support

Unscrew the oval handle on the ball-joint, it will split into halves, embrace them on the top of the base support, then tighten the oval handle. Slide the metal surface of the ball-joint into the slot on the back of the TV, then tighten the screw.

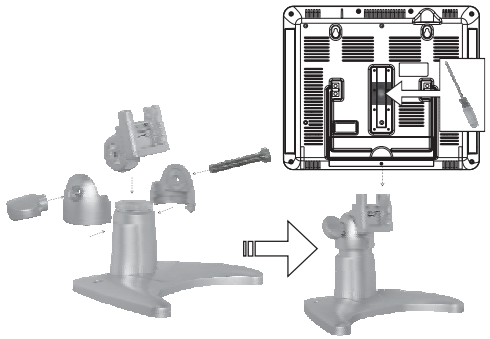

6.2. Connecting the power supply

Insert the power supply plug on the AC adapter into the jack on the TV marked DC12V.

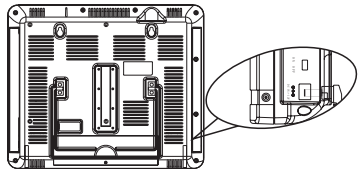

6.3. Connecting the earphones

Insert the earphone plug into the earphone jack on the TV.

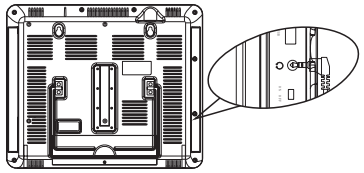

⚠ Notice

If earphones are used, sound is only transmitted through the earphones, and no sound is available from the stereo speakers of the TV.

6.4. Connection of AV Input

Connect the yellow port of the AV cable to the video jack, the white port to the left audio jack and the red port to the right audio jack, then insert the AV head into the AV input jack on the TV.

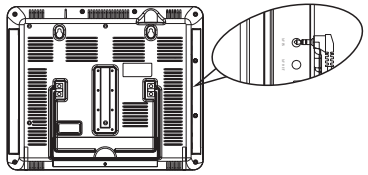

6.5. Connection of AV Output

Connect the yellow port of the AV cable to the video jack, the white port to the left audio jack and the red port to the right audio jack, then insert the AV head into the AV output jack on the TV.

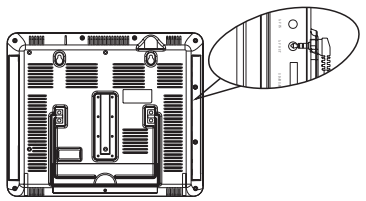

6.6. System connection

1. Always turn off all devices before connecting or disconnecting any cables.
2. Audio/Video cables should be connected correctly according to the colour.
   Yellow plug - Video jack
   White plug - Left Audio jack
   Red plug - Right Audio jack
3. Connection illustration

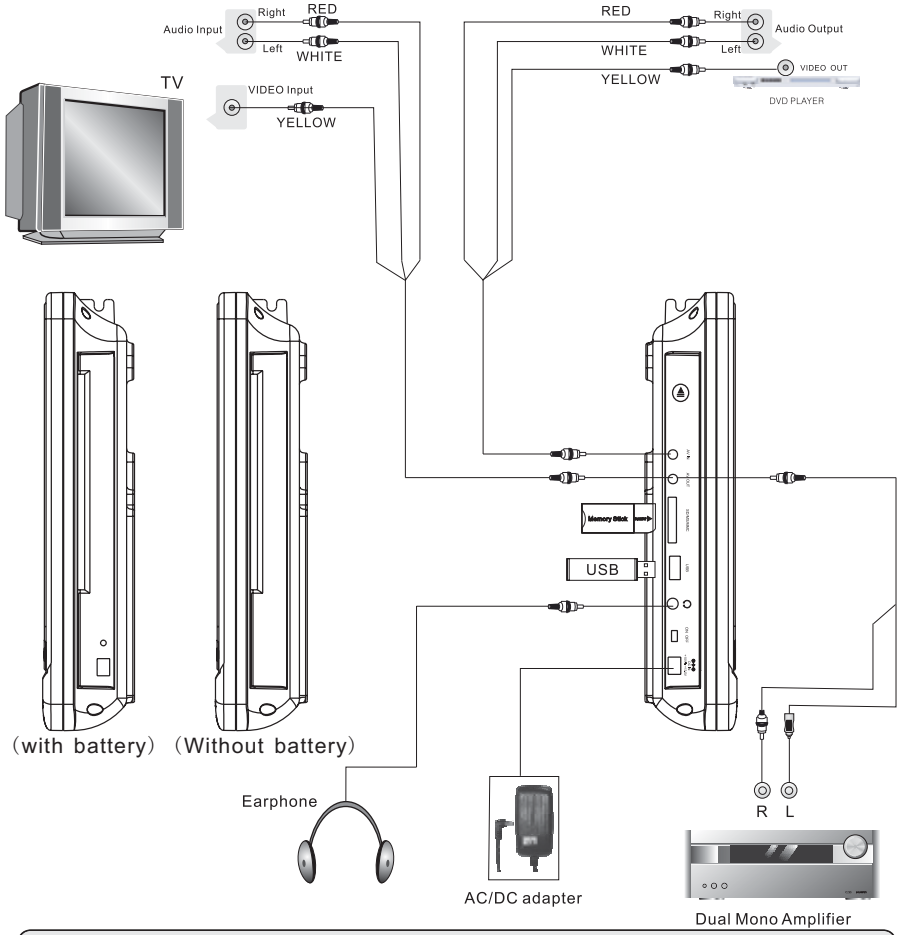

⚠ Notice

This player can not play disc, card and USB stick at the same time.

7. DVD Player Operation

After the system is connected, you can use the unit in DVD mode. Before use, please follow the instructions below:

Step 1: Press POWER to turn on the unit and it will begin to read the disc as follows:

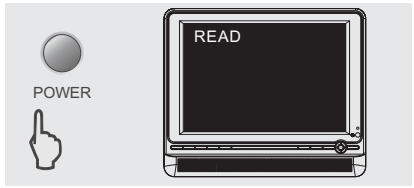

If there is no disc, the display will show:

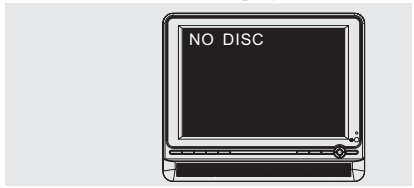

Step 2: Press EJECT, the disc inside will pop out automatically.

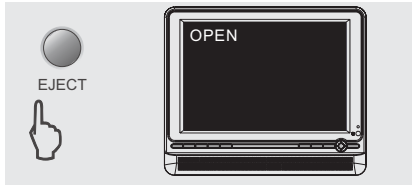

■Playing Disc

This unit will begin to play after reading the disc.

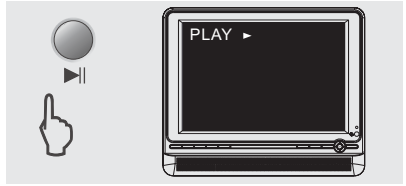

Press ▶|| to pause playback.
To return to playback, press ▶|| again.

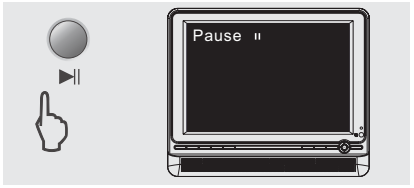

Press |◀◀ to choose the previous track or chapter.

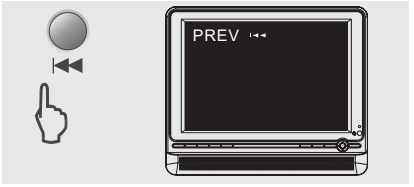

Press ▶▶| to choose the next track or chapter.

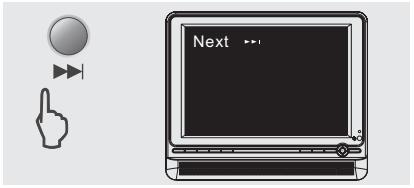

Press ▶▶ to search forward at different rate. The player will search the track at 2, 4, 8, and 20 times of the normal speed.

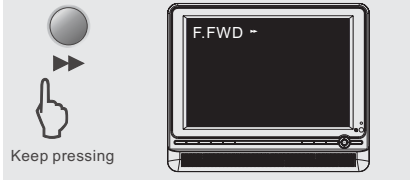

Press ◀◀ to search backward at different rate. The player will search the track at 2, 4, 8, and 20 times of the normal speed.

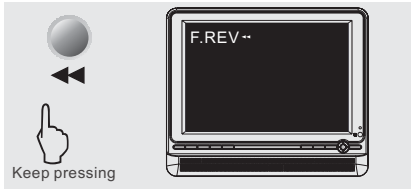

Press ■ to stop playback.

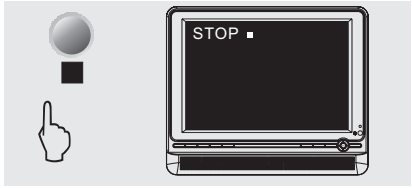

■ 7.1. Basic Operations

7.1.1. Display

During playback, pressing DISPLAY on the remote control will show the following:
For DVD disc:
The first time DISPLAY is pressed, the play time of the chapter will show.

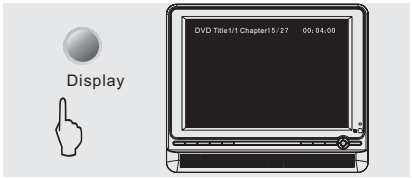

The second time DISPLAY is pressed, the language, subtitle and angle information will show.

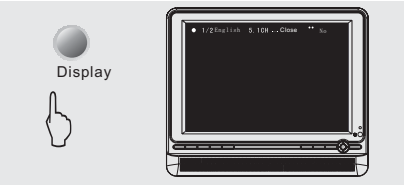

For DVD, Super VCD disc:
Pressing DISPLAY, the single track play time, track number and PBC will show.

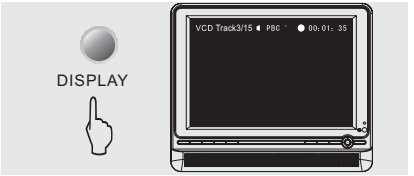

7.1.2. Subtitle

Press SUBTITLE repeatedly to select subtitle language. (Up to 32 different languages, only for the discs with this function.)

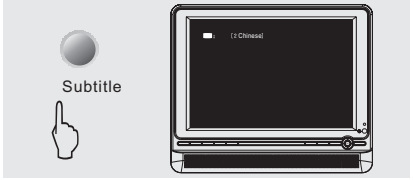

7.1.3. Language

Press LANGUAGE repeatedly to select audio language, up to 8 different audio languages. (4 for SVCD/CVD discs and only for the discs with this function.)

7.1.4. Title

During playback, press TITLE to enter the TITLE menu and select by pressing ▲\▼ \ ◄ \ ► or numbers during DVD playback.

7.1.5. Move Selection (▲\▼ \ ◄ \ ►)

During playback, pressing UP, DOWN, LEFT, and RIGHT allow the user to easily select Title, Directory or Menu settings.

7.1.6. Number Buttons
During playback, press number button directly to select according to the menu and begin to play a track or chapter.

7.1.7. PBC Play Mode
PBC ON: can only select menu functions using PREV and NEXT.
PBC OFF: can select tracks directly by pressing number button during playback or PREV and NEXT. (This function is for 3.0 version video CD only)

7.1.8. Repeat
During DVD playback, keep pressing REPEAT, it will show:

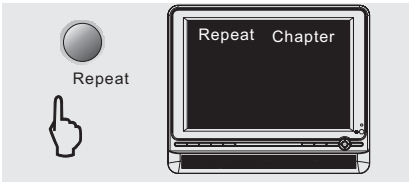

Repeat one chapter

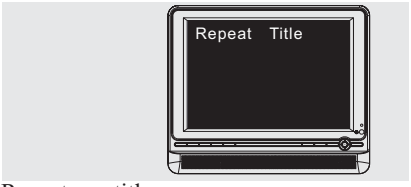

Repeat one title

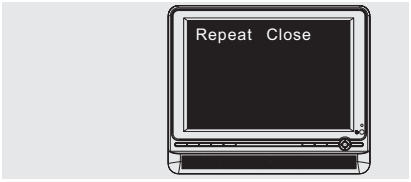

Repeat (off)

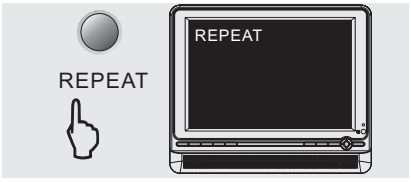

During Super VCD/DVD playback, press MENU to select PBC OFF, then keep pressing REPEAT, it will show:

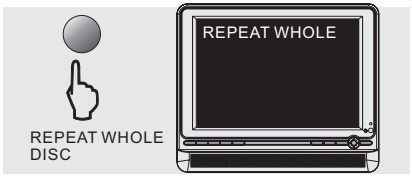

Press REPEAT again to close the Repeat function.

7.1.9. A-B Repeat
During playback, press [A-B] button once to set the starting point and again to set the end point. After setting the points, the program will repeat between A and B. Press [A-B] again to cancel the repeat.

7.1.10. Zoom
The DVD player can zoom up to 4 times to view a dynamic or still picture. Keep pressing ZOOM up to 1,2,3,4,5,6 times for 2,3,4,1/2,1/3,1/4 times zoom. Pressing for the seventh time will return to normal playback. Whilst zoomed in press the directional buttons to move.

7.1.11 Audio Mode
When playing VCD, pressing [L/R] can choose between stereo, left mono, right mono.

7.1.12. Volume/Mute
Press Volume+/Volume- to adjust the volume. Press MUTE to turn off the volume, press again to turn on the volume.

7.1.13. Goto
Press GOTO for selecting chapter/time to play, use LEFT/RIGHT and numbers to change, press ENTER to confirm. Press GOTO at any time to exit.

7.2. DVD Setup Menu

In DVD mode, pressing SETUP, the setup menu will appear. Use LEFT or RIGHT to select a setting and then press UP or DOWN to select one specific function setting. Press ENTER to confirm. Press SETUP again to exit.

7.2.1System Setup
System Setup has the following options: TV SYSTEM, AUTO PLAY, VIDEO, TV TYPE, PASSWORD, RATING, and DEFULT.

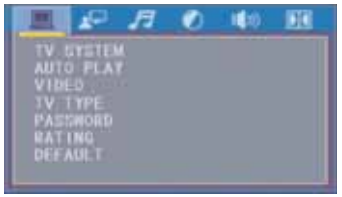

7.2.1.1 TV System
Press ▲ /▼ to select. Press ENTER to confirm. Press SETUP to exit.
(NOTE: If you have chosen NTSC, your TV system must support NTSC format, otherwise the screen is in black or white only)

7.2.1.2 Auto Play
This option allows the user to set the Auto Play function On or Off.

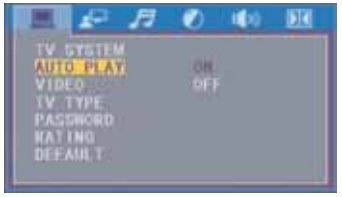

7.2.1.3 Video
This has been set to S-VIDEO as default.

7.2.1.4 TV Type
Use this option to change the display aspect ratio.

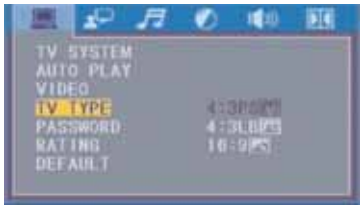

7.2.1.5 Password

The default code is 0000, entering this number to lock or unlock the password setting, press ENTER to confirm, press SETUP to exit.

7.2.1.6 Rating
Press ▲ /▼ to select. Press ENTER to confirm. Press SETUP to exit.

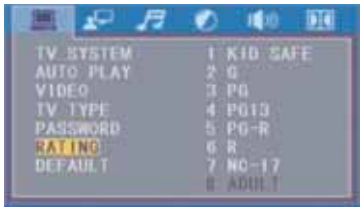

This setting only works until the password is open, you can change RATING level from 1 to 8 (8 means no restriction).

7.2.1.7 Default
Press ENTER to confirm the RESTORE setting. Press SETUP to exit.

Select this option to change this unit to the factory default setting.

7.2.2 Language Setup
Language Setup has the following options: OSD LANGUAGE, AUDIO LANGUAGE, SUBTITLE LANGUAGE, and MENU LANGUGAGE.

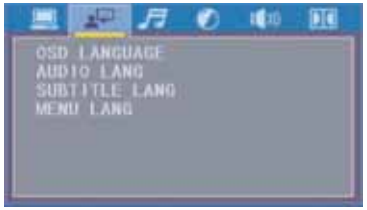

7.2.2.1 On Screen Display Language (OSD Language)
Press ▲/▼ to select. Press ENTER to confirm. Press SETUP to exit.

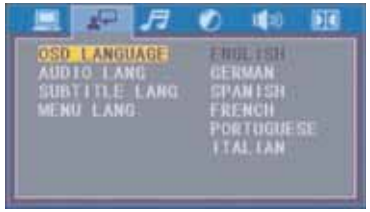

7.2.2.2 Audio Language
press ▲/▼ to select. Press ENTER to confirm. Press SETUP to exit.

7.2.2.3 Subtitle Language
Press ▲/▼ to select, Press ENTER to confirm. Press SETUP to exit.

7.2.2.4 Menu Language
Press ▲/▼ to select, Press ENTER to confirm. Press SETUP to exit.
This function must be supported by the disc.

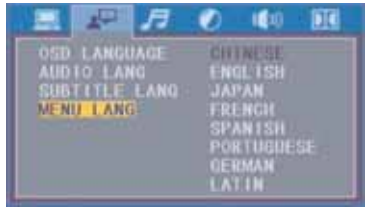

7.2.3 Audio Setup
Audio Setup has AUDIO OUT and KEY options.

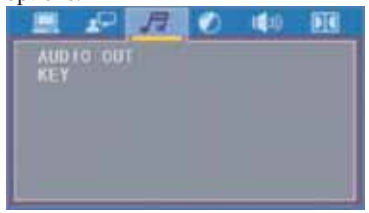

7.2.3.1 Key
Press ▲/▼ to select, Press ENTER to confirm. Press SETUP to exit.

7.2.4 Video Setup
Video Setup has the following options: BRIGHTNESS, CONTRAST, HUE, SATURATION, and SHARPNESS

7.2.4.1 Brightness
Press ▲/▼ to select. Press ENTER to confirm. Press SETUP to exit.

7.2.4.2 Contrast
Press ▲/▼ to select. Press ENTER to confirm. Press SETUP to exit.

7.2.4.3 Hue
Press ▲/▼ to select. Press ENTER to confirm. Press SETUP to exit.

7.2.4.4 Saturation
Press ▲/▼ to select. Press ENTER to confirm. Press SETUP to exit.

7.2.4.5 Sharpness
Press ▲/▼ to select. Press ENTER to confirm. Press SETUP to exit.

7.2.5 Digital Setup
Digital Setup has the following options: OP (OUTPUT) MODE, DYNAMIC RANGE, and DUAL MONO

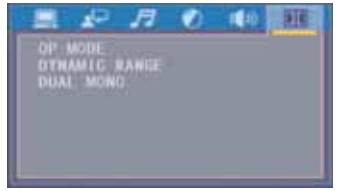

7.2.5.1 Output Mode
Press ▲/▼ to select. Press ENTER to confirm. Press SETUP to exit.

7.2.5.2 Dynamic Range
Press ▲/▼ to select. Press ENTER to confirm. Press SETUP to exit.

7.2.5.3 Dual Mono
Press ▲/▼ to select. Press ENTER to confirm. Press SETUP to exit.

7.3. Playing MP3 music

MP3 adopts the third audio compression format of MPEG to compress the audio signal to 12:1. A disc can record more than 600 minutes of music or 170 songs by using MP3 format and its quality is near to CD.

Basic Operations

1. Insert the disc, the player will search the disc for data and show the following:

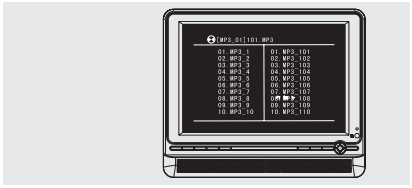

2. Press ▲ /▼ and PLAY to select the submenu. Press ► to enter the track menu and press ▲ /▼ again to select a track to play. Press PLAY to play this track or select the track directly in this submenu by pressing a number button.

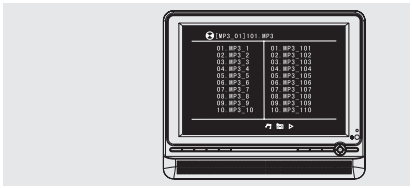

3. Press REPEAT to select Repeat Single Track, Repeat Directory, Repeat Whole Disc, or Repeat Off.

Other Functions

During MP3 playback, this unit also has Mute, Volume Control, Pause, Previous Track, and Next Track options. The operation is the same as CD playback.

7.4. Playing JPEG photos

JPEG (Joint Photographic Experts Group) is the most popular storage format for pictures used nowadays. JPEG uses a high compression ratio, compressing by 15-20 times of the original, the images still remain in good quality. Its size is small and can be used flexible. JEPG is supported by most photo management software and is good for photo storage. This player can decode Picture CDs made with JPEG code format.

Select pictures using numbers

1. Insert the disc and the player will begin to search the disc for data, the TV screen displays as below (It varies for different disc)
2. Press ▲ /▼ to select (Audio) or (JPEG) at the bottom of the screen. Press PLAY to confirm then you can select play music or JPEG picture.
3. Press a number to select the photo collection, for example:

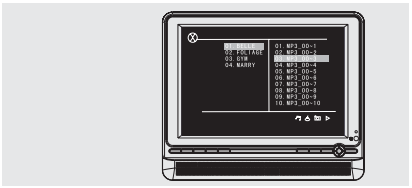

Select pictures using ▲ /▼ /◄ /►

1. Insert the disc, the player will begin to search the disc for data, menu will appear on the TV screen. Press ▲ /▼ /◄ /► to select the submenu on the left side of the screen. Press ENTER or PLAY to confirm. The TV screen shows the following:

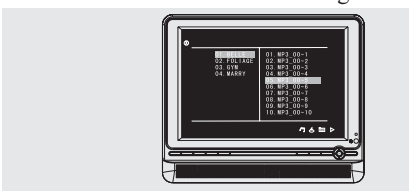

2. Press ▲ /▼ /◄ /► to select the picture of this submenu, press PLAY to play.

Other Functions

1. When playing JPEG files, pause play and repeat play can also be performed.
2. When playing JPEG files, press TITLE/RETURN to return to the menu.
3. During playback, press PREV and NEXT to select the previous or next picture.
4. During playback, press ▲ /▼ /◄ /► to rotate the picture to up, down, left or right.

7.5. Playing MPEG4 video

MPEG4 is a video compressing standard which supports movie play. The basic operations are the same as MP3 functions.

7.6. USB port Function

1. The USB port is compatible with flash memory, it is not guaranteed that it can be used with all types of MP3 players.
2. Insert the USB stick to the USB port of this device.
3. The files in the memory stick will show on the screen.
4. Press ◄ /► to select the (Audio) or (JPEG picture) at the bottom of the screen and press PLAY to confirm. Then you can select play music or JPEG pictures.
5. Pressing number buttons or ▲ /▼ /◄ /► can select play files.
6. Other operations are the same as the JPEG function.

7.7. Card reader function

1. Insert the SD, MS, or MMC card to the card slot on the side of the TV.
2. The files in the card will show on the screen.
3. Other operations are the same as the USB function.

8. Digital Freeview TV (DVB-T)

8.1. Turn on the machine

Press the POWER button on the remote control to turn on the machine.
It will enter the mode that it was when last turned off.
If it enters DVD mode, please press DVD/DVB on remote control to switch to DVB mode. For DVB mode, it will select the last channel watched. If there was no last channel watched, or this is the first time it is powered on, a message will appear, asking if you want to run the first time installation wizard.

8.2. First time installation

A message will appear, asking if you want to run the first time installation wizard. Upon selecting [YES], a new window will appear, asking you to select Country and OSD Language. Use ▲ /▼ /◄ /► to make the correct selections. Select [NEXT] and press ENTER to proceed to the next step. It will ask if you want to start an Auto Scan. If select [YES], it will start the scan automatically, if select [NO], it will exit the setup.

Picture 1

Picture 2

Picture 3

Picture 4

8.3. Main Menu

Pressing SETUP will enter the main menu, pressing SETUP again or RETURN will exit the menu.
In the Main Menu, press ▲/▼ to select Channel Guide, System Config, Installation, or Game submenu, press ► or ENTER to enter the submenu setting.


Picture 5

Picture 6

Picture 7

Picture 8

8.3.1 Channel Guide

Press ▲/▼ to select TV Channels, Radio Channels, Channels Class, Channels Edit, and Book List Options, press ENTER to confirm.

8.3.1.1 TV Channels

Upon entering the TV Channels menu, the channels are listed on the left side of the screen, and a preview window is on the right side. The channel can be changed using ▲/▼, press DISPLAY to sort the channels, press ENTER to start watching TV in full screen.

Picture 9

Picture 10

8.3.1.2 Radio Channels

Upon entering the Radio Channels menu, the channels are listed on the left side of the screen, and as they are radio channels, the default screen picture of this TV will appear in the preview window on the right side. The channel can be changed using ▲/▼, press DISPLAY to sort the channels, press ENTER to start listening to the radio.

Picture 11

8.3.1.3 Channels Class

From the Channels Class menu, each channel can be classified into a group. Press ENTER if you wish to add any channels to a column category, press ENTER again to cancel. Press RADIO button to switch to radio channels, press RADIO again to switch back to TV channels.

Picture 12

8.3.1.4 Channels Edit

To edit a channel's name, press ▲/▼ to move to the channel, press ENTER to confirm, press ◄/► to select a character, press ▲/▼ to change the character, press ENTER to confirm the change.

To change the channel's display sequence, press ▲/▼ to move to the channel, press ◄/► to move the cursor to the MOVE column, press ENTER to confirm, press ▲/▼ to move the cursor to the row you prefer, press ENTER to confirm.

To delete a channel, press ▲/▼ to move to the channel, press ◄/► to move the cursor to the DELETE column, press ENTER to confirm, press ENTER again to cancel. Press RETURN or SETUP to exit.

Press RADIO button to switch to radio channels, press RADIO again to switch back to TV channels.

Picture 13

8.3.2 System Config

Press ▲/▼ to select TV Setting, Video Setting, Audio Setting, Language, Parent Control, Time Setting, and System Info Options, press ENTER to confirm.

8.3.2.1 TV Setting

The TV Setting has the following options: TV System, Video, and TV Type. Press ▲/▼ to move the cursor to one of the options, press ◄/► to change the setting, or press ENTER to change the setting. Press RETURN or SETUP to exit.

Picture 14

8.3.2.2 Video Setting

The Video Setting has the following options: Brightness, Contrast, Hue, and Saturation. Press ▲/▼ to move the cursor to one of the options, press ◄/► to change the setting, or press ENTER to change the setting. Press RETURN or SETUP to exit.


Picture 15

8.3.2.3 Audio Setting

This function is not available yet.

8.3.2.4 Language

The Language menu allows the user to change the OSD Language. Press ◄/► to change the language, or press ENTER to change the setting. Press RETURN or SETUP to exit.

Picture 16

8.3.2.5 Parent Control

The Parent Control menu has two options: Change Pin and Channel Lock. When selecting Change Pin, the user will be asked to enter the Old Pin, New Pin and the New Pin again. In order to change the Channel Lock, the user will be asked to enter the password (pin) first, if the password is correct, the Channel Lock menu will appear. Use ▲/▼ to select a channel, press ENTER to lock or unlock the channel. Press RADIO button to switch to radio channels, press RADIO again to switch back to TV channels. Press RETURN or SETUP to exit.

Picture 17

Picture 18

Picture 19

Picture 20

The system default password is 0000.

8.3.2.6 Time Setting

TIME ZONE: If you fixed the country whilst searching for channels, you cannot adjust the time zone. Restore to factory settings, and don't search for channels. Access the TIME ZONE menu, then press ENTER, a menu will show, use UP or DOWN to select the time zone you are and press ENTER to confirm.

8.3.2.7 System Info

System Info displays the firmware version and date, along with tuner and model information.

Picture 21

8.3.3 Installation

Press ▲/▼ to select Auto Scan, Manual Scan, and Default Setup Options, press ENTER to confirm.

8.3.3.1 Auto Scan

In Auto Scan, press ◄/► to select your country, press ▲/▼ to move to Start Scan, Press ENTER to start.

Picture 22

Picture 23

8.3.3.2 Manual Scan

In Manual Scan menu, a scan can be performed by setting the following options: Country, Scan Type, Start Channel, End Channel. If the Scan Type is Signal Channel, only the Country and Start Channel can be set. If the Scan Type is Channel Range, the Country, Start Channel, and End Channel can be set. Use the ▲/▼ to select the options and ◄/► to change the settings. Once finish the setting, move to Start Scan and press ENTER to start.

Picture 24

8.3.3.3 Default Setup

A message box will appear, asking if you want to reset the machine to factory default settings. After the reset, the first time installation message will appear.

Picture 25

8.3.4 Game

There are three games in the Game menu. Press ▲/▼ to select the game you want to play, press ENTER to confirm. The games are played using ▲/▼/◄/► button. Press RETURN or SETUP to exit the game.

Picture 26

Picture 27

Picture 28

Picture 29

9. Analogue TV

Press TV on the remote control to switch to the Analogue TV mode.
Press MENU, use ▲/▼ and ◄/► to select and adjust.

Press MENU once	BRIGHT	0~100
	CONTRAST	0~100
	COLOR	0~100
	ENGLISH	Other language options
Press MENU twice	AUTO-SEARCH	◄ ►
	SEARCH	48MHz ~ 860MHz
	FINE	
	BAND	UHF / VHFL / VHFH
	POSITION	0 ~ 254
	SKIP	ON / OFF
	S-COLOR	AUTO / PAL /SECAM
	S-SYS	DK/ I / L / BG
	SWAP	0 ◄ ► ━

Press MENU to exit.

⚠ Notice

1. Auto Search → Start from Program NO .0.
2. When the signal is received under Manual Search, the indication frequency will stop, which is the optimum position for signal storage. If the signal is too weak, the system will automatically identify it as no signal.
3. In the case of a picture without sound, please check the Sound System for correct setup first.
4. If the input signal is not strong enough, please adjust “Fine” option, it may improve the picture and sound quality.

⚠ Caution

If the signal is too weak, the image will remain poor whatever you do, and may output loud noises, shaking images and inferior sound etc., which is not the TV's fault. If the image remains poor when using the telescopic antenna, please try to use a roof top aerial or an amplified external antenna.

10. AV Input

Press MENU on the remote control.
Use ▲ / ▼ and ◀ / ▶ to select and adjust.

Press MENU once	BRIGHT	0~100
	CONTRAST	0~100
	COLOR	0~100
	ENGLISH	Other language options

Press MENU to exit Menu.

11. Troubleshooting

Problems listed below do not necessarily signify a fault with the unit.
Please check this list before requesting repairs.

Problems	Possible Causes and Solutions
No picture and no sound	Check the connection with the AC adapter/Car Adapter. Use of an unauthorized power supply. Power switch on the side of the TV is off. TV is on standby as it was switched off by pressing the POWER on remote.
No image	Check the channel selection. Scan for channels again. Always re-scan for channels in new locations. Ensure the video cable is not damaged. Ensure video settings are correct.
No sound	Check the sound volume. If you are using earphones, test them on another item. Check that the cable is plugged in. Sound System is not correctly set in Analogue TV mode.
Picture freezing, and/or sound distorting	Signal too weak, please check the aerial. Try to use a proper roof top aerial or amplified aerial.
No signal	Signal too weak, please check the aerial. Try to use a proper roof top aerial or amplified aerial.
Dark Picture	Please adjust Brightness and/or Contrast settings.
Snowstorm	Motors/Trains/High Voltage Lines and Neon Lights may affect the signal.
Achromatic/Flashing/No Colour	Please adjust the Colour Setting. S-Color is not correctly set in Analogue TV mode.

12.Technical Parameters

Product Name: 11inch digital and analogue LCD TV with built-in DVD player, card reader and USB port
Disc Format: DVD / MPEG4 / SVCD / VCD / CD / Mp3 / CD-R /CD-RW
MPEG4: 4 and 5 versions without QPEL and GMC
AC / DC adapter: AC 100~240V - 50~60Hz
DC adaptor +12V (car cigaretter lighter)
Picture Resolution: ≥ 500 Line
Video S/N Ratio: ≥ 60dB
Frequency Response: fs 96KHz: 4Hz - 44KHz: +/- 1dB
Audio S/N Ratio: ≥ 90dB
Dynamic Range: ≥ 90dB
Harmonic Distortion: ＜ 0.01%
D/A Converter: 96KHz / 24bit
Video Output Level: 1Vp - p(75ohm)
Audio Output Level: 1.0V 0.1V
UHF: 474MHz ~ 858MHz
DVB Decode Standard: MPEG2 ISO/IEC 13818 MPEG2 MP@ML
ATV Receiving Channel: DK/I 49.75MHz ~ 855.25MHZ
BG 48.25MHz ~ 855.25MHz
ATV Sound System: DK ☐ I ☐ BG ☐ L ☐
Screen Size: 11 inches
Audio Output: 0.3W (Max)
Loudspeaker: two 40mm round loudspeaker.
Outer Dimension: 300 x 250 x 64 mm
Weight: (1) about 2200g with battery; (2) about 2005g without battery;
Dot Matrix: 0.1000 (H) x 0.3000 (V)
Resolution: 800 x RGB x 480
Response Speed (ms): R:30 / F:50
Visible Angle: u:50 / D:60, R/L: 60
Brightness: 300cd/m^2
Contrast: 150:1

⚠ Warning

This operation instruction is only intended for reference. No further notice is available to any modification of all information contained therein. Due to continuing improvements, the features and design are subject to change without notice.

⚠ Warning

No user serviceable components are fitted inside this TV. Do not attempt any repairs, as this will invalidate the warranty. Any repairs must be carried out by either the manufacturer or their nominated service centre. Parts inside this set are subject to high voltage.

【☑ after some items in this manual means it is available with this function. 】

13. Battery Charging

If there is no built-in battery in your product, please skip this page.

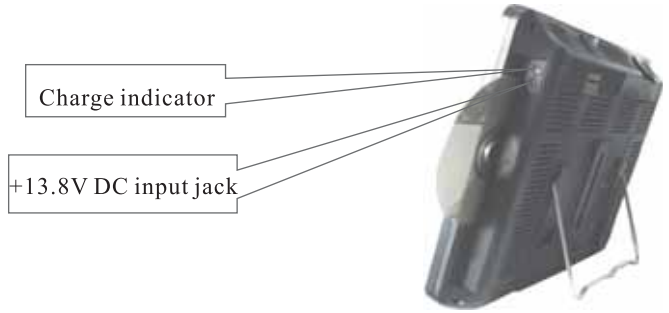

1. The lithium battery is built into this machine.
   Charge time: 5 hours.
   Playback time: 1.5 hours
2. To charge, connect the supplied AC adapter to the socket marked “+13.8V DC IN”.
   If the indicator becomes red, the battery is charging.
   If the indicator becomes green, the battery has been fully charged.
3. To run the unit from the battery, remove the power supply from the “+13.8V DC IN” and set the ON/OFF switch on the machine to ON.

⚠ Warning

Use only the supplied power adapters with this device. Failure to do so can cause damage to the device and risk personal injury.

⚠ Warning

The replacement of the built-in lithium battery, it must use the same type of battery factory, otherwise, it could have unclear consequences.

⚠ Special Notice

Please ensure unit is turned off when not in use. If the battery has not been used for some time (6 months) then fully charge the battery to ensure maximum battery life.

Warranty

This product is guaranteed for 2 years from the date of the original purchase. This warranty covers costs of parts and labour for the first 12 months and covers manufacture defects of major components which include LCD screens, DVD disc loaders and software on main circuit board for the second 12 months. In the unlikely event of any defect arising due to faulty materials or workmanship, the unit will be either replaced or repaired (where possible) during this period. An alternative product will be offered in case the product is no longer available or repairable.

This warranty is subject to the following conditions:

- The warranty is only valid within the country where the product is purchased
- The product must be correctly installed and operated in accordance with the instructions given in the user's manual.
- The product must be used solely for domestic purposes.
- The warranty only covers the main unit, and does not cover the accessories.
- The warranty does not cover the damage caused by misuse, negligence, accident and natural disaster.
- The warranty will be rendered invalid if the product is resold or has been damaged by inexpert repairs. The manufacture disclaims any liability for incidental or consequential damages.
- Please consult our customer service before returning any product; we are not responsible for any unexpected product returns.
- Any faulty products must be kept and returned in the original packaging with all the accessories and the original copy of the purchase receipt.

The warranty is in addition to, and does not diminish, your statutory or legal rights.

Please note:

1.A LCD display panel comprises a very large number of pixels and each pixel contains three sub-pixels - red, green and blue. Due to the complex manufacturing process, occasional pixel anomalies may occur. Pixel anomalies cannot be fixed or repaired and can happen at any stage in the LCD's life. August products should not be deemed as faulty if there are no more than three bright and dark pixels respectively.

2.Portable TV antennas included in the box are for people to watch Freeview TV in areas where the signal is very strong and there may be difficulties in receiving signal with the included portable antennas in some regions at present. This is due to the fact that Freeview is yet to operate in full power in the UK. August TVs should not be deemed as faulty if it can receive Freeview by connecting to a proper digital rooftop aerial.

Customer Service:

Telephone: +44 (0) 870 850 3525
Email: service@augustint.com